

**Issue :** 1246 A In the effort to improve our products, we reserve the right to make changes judged to be necessary.




#### TECHNICAL DATA SHEET

#### **R3C MALE HOUSING**

# **R197.135.\_81**

Series : SMB CARLOCK

AUTOMO

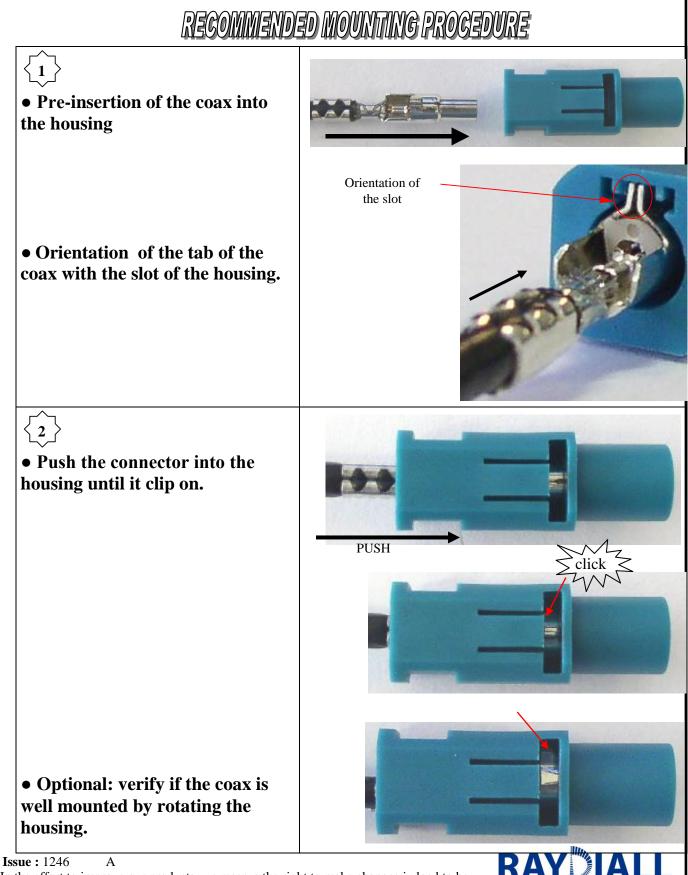

In the effort to improve our products, we reserve the right to make changes judged to be necessary.

#### TECHNICAL DATA SHEET

#### **R3C MALE HOUSING**

### R197.135.\_81

Series : SMB CARLOCK


### RECOMMENDED DISASSEMBLING PROCEDURE

## $\left\langle \stackrel{\frown}{1} \right\rangle$

• To unlock the coax from the housing, rotate the coax until the tab is not in front of the elastic finger of the housing.

• insert a screw driver between the elastic finger and the slot of the housing as shown on the picture.

• Tip down the screw driver as shown on the picture to lift up the elastic finger until you have enough room.

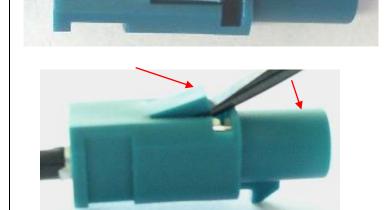





• Hold on the elastic finger up and rotate the coax until the tab is in front of the elastic finger of the housing. (you can use the crimping of the jacket as a reference).

• pull on the cable assembly to remove the coax from the housing.

### WARNING! Do not use anymore the housing after removing it.

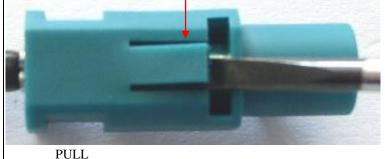

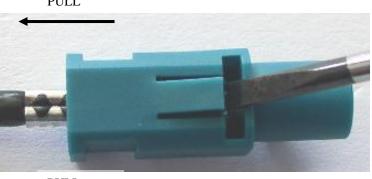

PULL



**Issue :** 1246 A In the effort to improve our products, we reserve the right to make changes judged to be necessary.



4/4